



ROSETTA® BELVEDERE

ROUND FIRE PIT INSTALLATION GUIDE


BLOCK LAYOUT PATTERN:

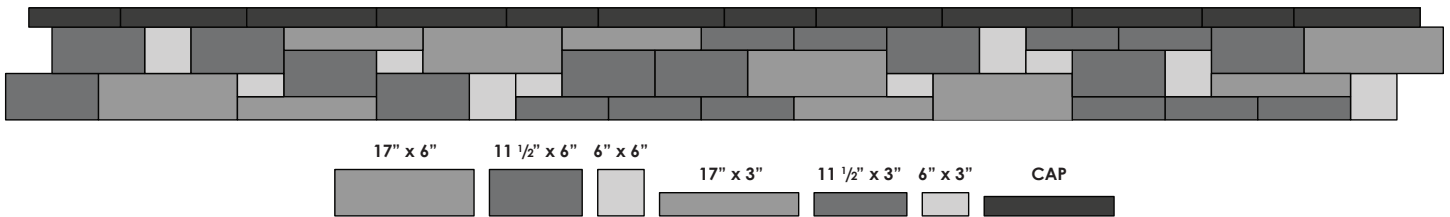

TOP VIEW:

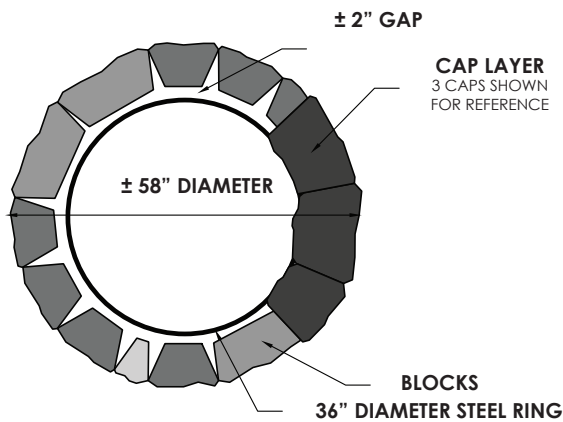

CROSS SECTION:

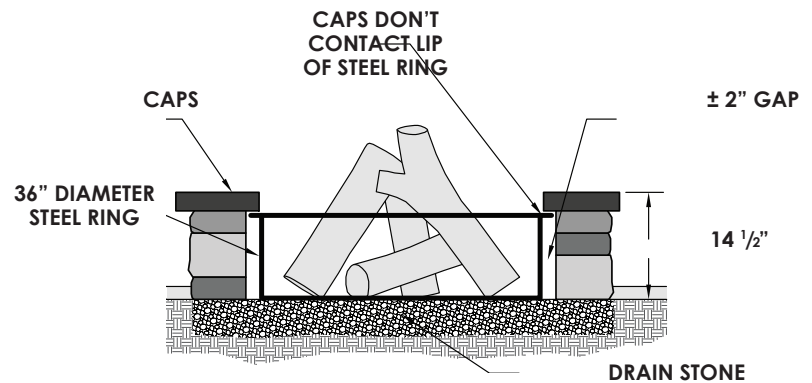

INSTALLATION INSTRUCTIONS:

1. Mark out the location for your fire pit. Make the area slightly larger than the dimensions shown.
2. Excavate for drain stone base. (Approximately 6")
3. Fill excavated area with drain stone, level, and compact.
4. Place and center steel ring on prepared base.

Note: The Lip on the steel ring is 2" wide and can be placed on the base and used as a guide for the first course. Remember to flip the steel ring lip side up after the first course has been set.
5. Place blocks per the pattern. (Keep blocks approximately 2" off steel ring)
6. After placing blocks around the ring, adjust the blocks in or out to make the circle close and fit tight.

If the blocks do not close the circle, move all blocks slightly in. If the blocks seem too long, move the blocks slightly out.
7. Place caps around the top layer of the fire pit. (Caps should fit tightly together with no gaps)

Note: The steel ring should rest approximately 1/4" below the caps. This will allow for proper heat dispersal, extending the life of your fire pit.

WARNING: DO NOT place fire pit directly on concrete products. The high heat can adversely affect the integrity of the product.
 WARNING: Not suitable for large fires. Fire size should not allow flame to contact the caps.